

**ASF172X-T1**

# **Thermal Temperature Station Floor Stand**

**Quick Start Guide**



V1.0.0

# Foreword

## General

This manual provides instructions for installing ASF172X-T1 Thermal Temperature Station Floor Stand.

## Safety Instructions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning
 <b>NOTE</b>	Provides additional information as the emphasis and supplement to the text.

## Revision History

Version	Revision Content	Release Time
V1.0.0	First release.	March 2020

## About the Manual

- This manual is for reference only. If there is inconsistency between the manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the manual.
- The manual would be updated according to the latest laws and regulations of related regions. For detailed information, see the paper manual, CD-ROM, QR code or our official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, please refer to our final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurred when using the device.
- If there is any uncertainty or controversy, please refer to our final explanation.

# Important Safeguards and Warnings

This chapter describes the contents covering proper handling of the bracket, hazard prevention, and prevention of property damage. Read these contents carefully before using the bracket, comply with them when using, and keep them well for future reference.


## Operation Requirement

- Do not place or install the bracket in a place exposed to sunlight or near the heat source.
- Keep the bracket away from dampness, dust or soot.
- Keep the bracket installed horizontally on the stable place to prevent it from falling.
- Operate the bracket within the rated range of power input and output.
- Do not disassemble the bracket.
- Transport, use and store the bracket under the allowed humidity and temperature conditions.

# Table of Contents


<b>Foreword</b> .....	I
<b>Important Safeguards and Warnings</b> .....	II
<b>1 Dimensions</b> .....	1
<b>2 Installation Guide</b> .....	2
<b>2.1 Mounting Requirements</b> .....	2
<b>2.2 Dimensions</b> .....	3
<b>2.3 Installing the SafetyTemp Temperature Monitoring Kiosk</b> .....	3

# 1 Dimensions

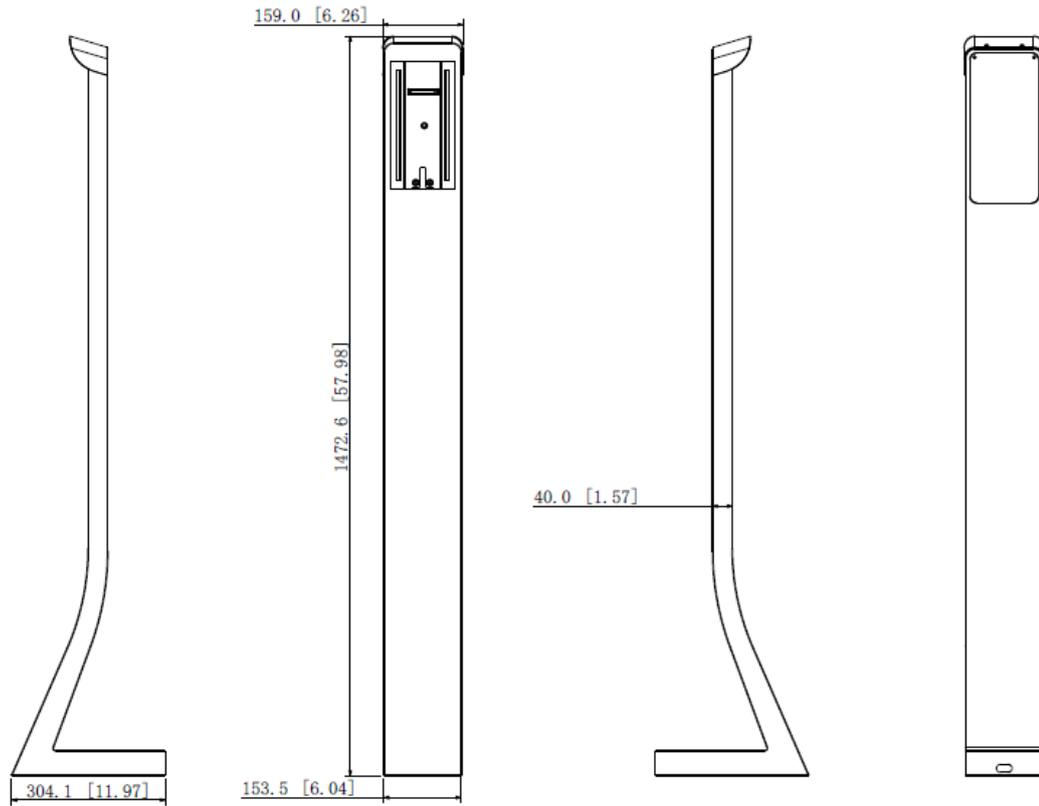

# 2 Installation Guide

## 2.1 Mounting Requirements

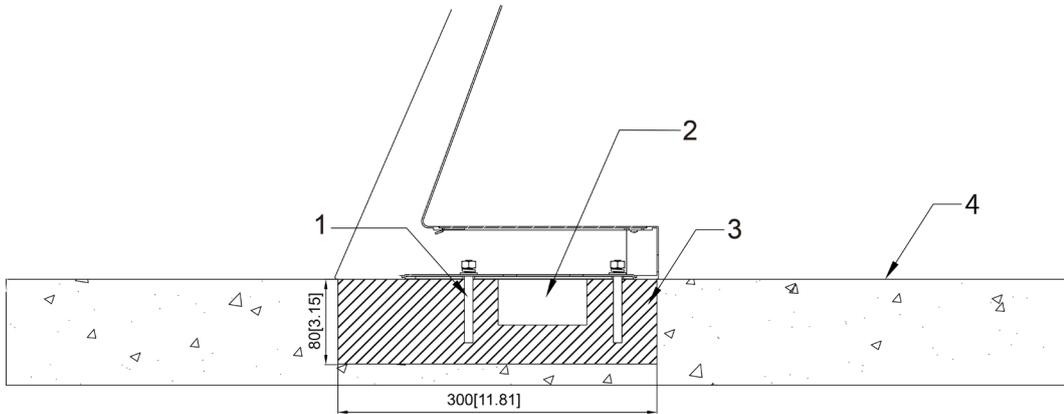


No.	Name
1	Expansion bolt
2	Concealed wiring hole
3	Cement sinker
4	Ground




- The recommended dimensions (L × W × H) of cement sinker are: 300 mm x 180 mm x 80 mm (11.81" × 7.08" × 3.15").
- The floor bracket is placed in the center of the cement sinker.
- Use the expansion bolts provided in the package to complete the fixing.
- If the screws are loose, it is necessary to complete the on-site maintenance in time to prevent the floor bracket from tilting and falling.

## 2.2 Dimensions

Figure 2-4 Bracket installation dimensions of 7-inch (X) access controllers (mm [inch])

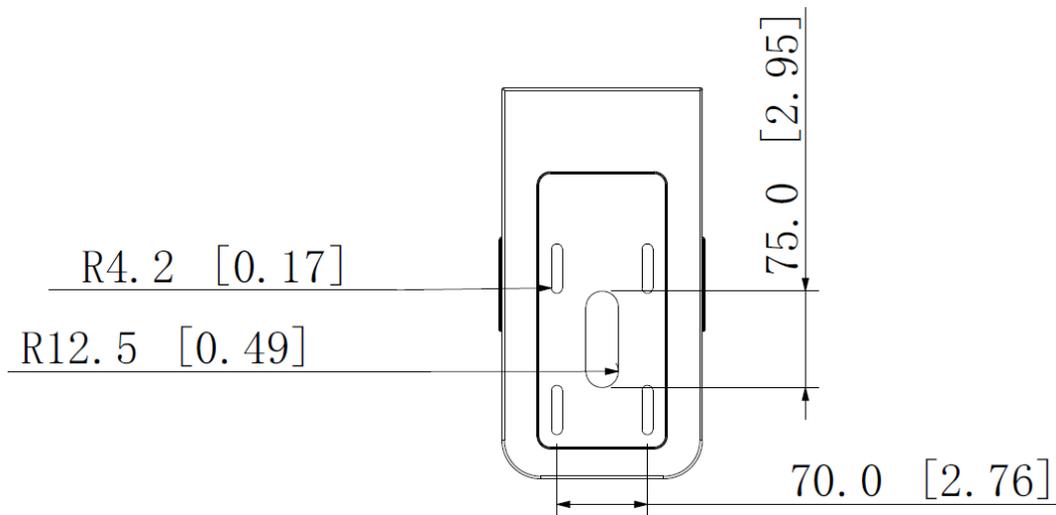

## 2.3 Installing the SafetyTemp Temperature Monitoring Kiosk

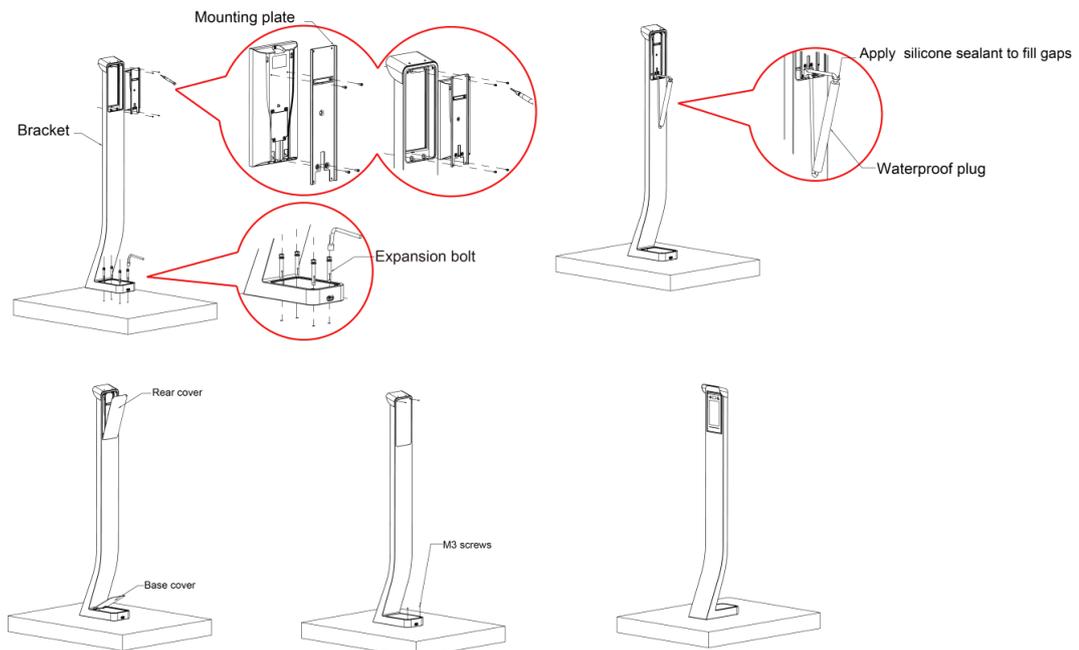

1. Detach rear cover of the kiosk.
2. Replace the short cable with a longer one.
3. Flatten the seal ring of the port cover, and then fix the port cover with 4 screws.
4. Thread the long cable through the bracket, and then fix the bracket with 4 anchor screws.
5. Attach the kiosk to the bracket.
6. Connect cables for the kiosk.
7. Put the waterproof plug on the cable, and apply silicone sealant to fill gaps.
8. Install the rear cover and base cover on the bracket.